PART NUMBER

PFF25-1101

DESCRIPTION

FRONT WISHBONE FRONT BUSH

INSTALLATION GUIDE

Contents (parts per pack):

4 x Polyurethane Bushes
2 x Delrin Washer
2 x Stainless Steel Sleeves
1 x PTFE/Silicone Grease



Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.
It is recommended that:
-all work to be carried out by a licensed technician;
-all safety precautions adhered to;
-wheel alignment to be checked and adjusted as required after any suspension work.
-All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the front suspension wishbone from the vehicle and press out the original rubber bush.
2. Clean any dirt and corrosion from the bore of the wishbone, removing any sharp edges or burrs with a suitable file.
3. Push the polyurethane bushes into each side of the wishbone.
4. Apply some of the supplied grease to the bore of each polyurethane bush, then insert the stainless steel sleeve until flush with the front bush.
5. Fit the supplied washer on the exposed end of the sleeve and against the end face of the rear bush, as shown in **Figures 1 & 2**.
6. Refit the wishbone to the vehicle and tighten all hardware to the manufacturer's recommended torque settings.

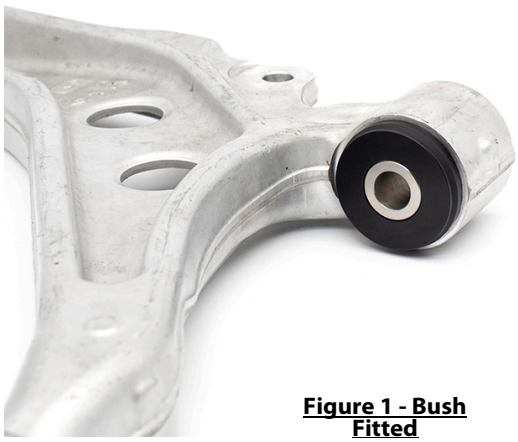


Figure 1 - Bush Fitted

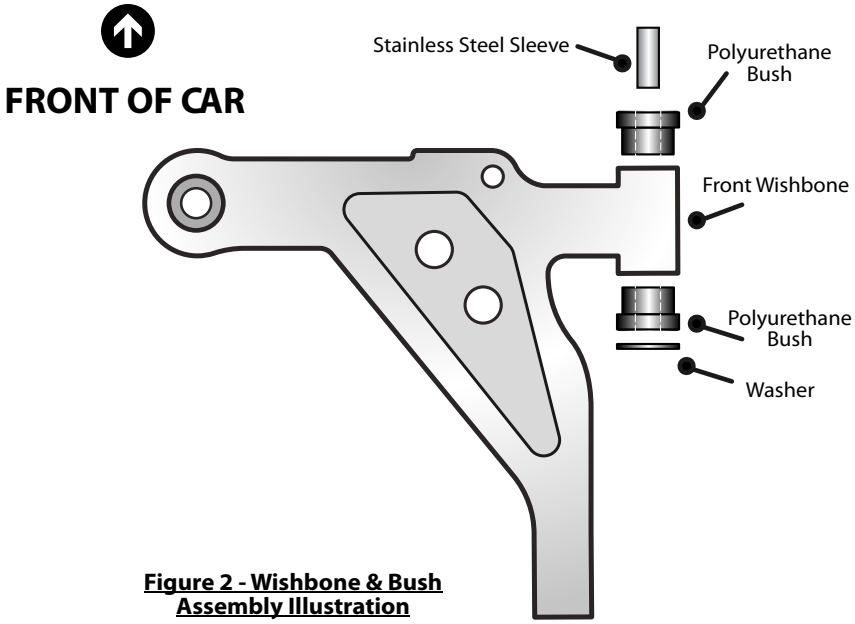


Figure 2 - Wishbone & Bush Assembly Illustration